

# How to change Solution - Bosch alarm system arm codes

Changing Alarm Codes with [alarmmaintenance.com.au](http://alarmmaintenance.com.au)

Enter the existing **master code**

Press **[1]** followed by the **[#]** button

Two beeps will be heard indicating that this step was valid

The stay and away indicators will begin to flash on the keypad

Enter the code number (**1-34**) then press the **[#]** key

Two beeps will be heard indicating that the system is ready for the new alarm code

Enter your **new code** (4 digit number)

Press the **[#]** button

Two beeps will be heard indicating that the code change was valid

The code is now changed and the system is ready to use

Example

**9398 1# 1# 5756 #**