

# SHORT LIST USER MANUAL TO ARM DISARM SOLUTION 880 Ultima Alarm System

## ARMING ALARM SYSTEM

Enter **USER CODE** the **#** (Away) example. **1 2 3 4 #** (Away)  
AWAY light or indicator comes ON

## DISARMING ALARM SYSTEM

Enter **USER CODE** then **#** (Away) example. **1 2 3 4 #** (Away)  
Away light comes OFF

## MEMORY EVENT HISTORY

Enter **MASTER CODE** then **3** then **#** (Away) example **1 2 3 4 3 #** (Away)  
Event is displayed – most recent displayed 1st to the least recent

## BYPASSING ALARM SENSORS

Enter **\*** twice **USER CODE** then **ZONE** then **\*** (Stay)  
Repeat for other zones to isolate, then **#** to exit feature eg to isolate ZONE 2:  
**\*\* 1 2 3 4 02 \* #** (Away)

## TESTING THE ALARM SYSTEM

TEST ALARM MONITORING TO YOUR MOBILE PHONE – Press **9** on keypad until you hear two beeps

SIREN – Press **1** and hold until you hear two beeps – siren will sound for 2 seconds

BELL – Press **2** until you hear two beeps – internal siren will sound for 2 seconds

STROBE LIGHT – Press **3** until you hear three beeps –

This will turn strobe ON. Repeat, press 3 until you hear three beeps to turn strobe off.

## RESETTING TIME AND DATE

Enter your **MASTER CODE** then **6** then **#** (Away) eg. **1 2 3 4 6 #** (Away)  
Day\_(DD)\_Month\_(MM)\_Year\_(YY)\_Hour\_(HH)\_Minute\_(MM)  
(example) 01th Aug 2015 at 14:25 hours = **0 1 0 8 1 5 1 4 2 5 #** (Away)

## **SOLUTION KEYPAD BEEPING**

BEEPING SOUND – If plug pack is unplugged or the mains POWER is disconnected the keypad will SOUND once every minute. To silence, press **5** and hold until you hear two beeps to display fault, see fault list and instructions above then press **#** to exit this feature.

## **HOW TO USE WALK TEST MODE**

Enter your **master code** followed by **4** and the **away** button

The keypad will beep every second. You can now walk around your premises and test all the alarm detectors. The keypad will sound one long beep while the siren will sound one short beep when a zone is sealed or unsealed. When you have finished testing the detectors press the **AWAY** button to exit this feature

## **HOW TO CHANGE YOUR PIN CODES**

Enter **master code** then press **1** **away** button.

Enter user number digit (**1-6**) then **away**. Then enter new code followed by the **away** button

Solution Bosch alarm system manuals with [alarmmaintenance.com.au](http://alarmmaintenance.com.au)